
SERVICE 501J/K TELEPHONE SETS

1. GENERAL

1.01 Reissued to add nontechnical changes to

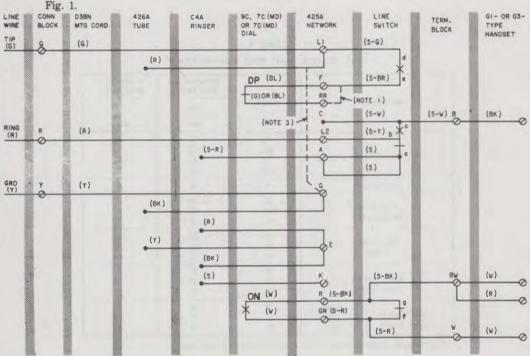

NOTES:

- I. FOR MANUAL SERVICE, MOVE (S-BR) LEAD FROM F TO RR TERMINAL.
- TO SILENCE RINGER PERMANENTLY: CONNECT (Y) MOUNTING CORD LEAD TO SAME TERMINAL AS (R) MOUNTING CORD LEAD AT CONNECTING BLOCK.
- 3. FOR NEGATIVE STATIONS IN OFFICES WITHOUT ANI, (R) LEAD FROM 426A TUBE MAY BE CONNECTED TO G IF RINGER OPERATION IS MARGINAL.
- WIRED FOR NEGATIVE RING PARTY FOR CLASSES OF SERVICE NOT SHOWN, REFER TO TABLE A.
- 5. LINE SWITCH SEQUENCE, HANDSET REMOVED.
 (1) bc MMAKES (3) ob BREAKS
 (2) de MAKES (4) gf BREAKS

DP - DIAL PULSE CONTACT

ON - DIAL OFF-NORMAL CONTACT

Fig. 1-\$501J/K (MD) Telephone Set, Connections

TABLE A
LINE, RINGER, AND TUBE CONNECTIONS

			NEGATIVE (-) RING PARTY*	POSITIVE (+)
WIRE OR LEAD		COLOR	1-5 RING	3-7 RING
Line Switch	1,61	S	A	A
426A Tube (3-Element)		R BK Y	L1 or G G E	A E G
Mtg Cord in Set		R G Y	L2 L1 G	L2 L1 G
Mtg Cord at Conn Block		R G Y	R G Y	R G Y
Line Wire at Conn Block	Ring Tip GRD	R G Y	R G Y	R G Y

^{*} For tip party stations reverse (G) and (R) mounting cord leads.

Note: Factory-wired for negative tip or ring station.