SERVICE

2565LK AND 2565LKM TELEPHONE SETS

1. GENERAL

1.01 This section provides connection information for the 2565LK (nonmodular) MD and 2565LKM (modular) telephone sets.

1.02 Reissued to:

- Show 2565LK rated MD.
- Add information on 2565LKM (modular) telephone sets
- Add comcode numbers.
- 1.03 ♦Older nonmodular 2565LK telephone sets are furnished from the factory equipped with a G3A6 handset and cord. Current modular 2565LKM telephone sets are equipped with a G15A handset, H4DU handset cord, and 616D jack assembly (Fig. 1).◆

2. CONNECTIONS

- 2.01 These sets are factory-wired for 1A1 or 1A2 KTS, 3-type or 4A speakerphone, and individual or common line ringer. They are equipped with hold key and cutoff key. Mounting cord conductors are provided for illuminating the hold key lamp, but the lamp is not provided with the set.
- 2.02 When used with 1A KTS and speakerphone, modify sets as shown in Fig. 2 or 3.
- 2.03 These sets are factory-equipped with a KS-20419L1 (10 volt AC only) buzzer.
- 2.04 The H1-type ringer leads are wired to terminals RR and RT. When power failure feature is provided in the KTS, the common audible signal must be wired with capacitor in series.

- 2.05 If speakerphone (3-type) control unit is located near the telephone set, the mounting cord conductors can be extended to the control unit by using a 149-type adapter or 66E-type connecting block. If control unit is located at key equipment, extend leads through an A25B connector cable or inside wiring cable. Speakerphone connections for the 2565-type telephone sets are shown in Division 512.
- 2.06 When a 2565-type set not furnishing speakerphone feature is multipled with other sets furnishing speakerphone feature, certain control leads must be disconnected, insulated, and stored (Note 3, Fig. 1) to avoid interference with working circuits.
- 2.07 Exclusion can be provided with these sets by the addition of a D-179985 Kit of Parts which must be ordered separately. Exclusion switch can also be used to cutoff ringer or buzzer in set. Connect as shown in Table A.
- 2.08 Use an A20B connector cable when speakerphone and exclusion features are not provided.
- 2.09 Cutoff of extension stations, ringers, or buzzer can also be made using the cutoff key on the 589AJ key.
- 2.10 A polarity guard is used only when specified by local instruction for end-to-end signaling installation when battery and ground reversals may be encountered.
- 2.11 When polarity guard is required with these sets, install a ▶819040528♠ or P-90D052 guard assembly. Connect as shown in Table B.
- 2.12 An ♦811353135♦ or P-13E313 terminal strip assembly is available when additional terminating points are required for auxiliary services such as buzzers, lamp, etc. Assembly must be ordered separately.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

- 2.13 Installation instructions for the exclusion switch, polarity guard, and auxiliary terminal strip are given in Section 502-500-120.
- 2.14 The 4th key position is convertible from line pickup (locking) to signaling (nonlocking) by
- removal of the ▶811218924♠ or P-12A892 screw detail. Arrange wiring as shown in Table C.
- 2.15 Lamp in Hold position can be furnished but must be separately ordered and installed.

TABLE A
EXCLUSION KEY CONNECTIONS

| EXCLUSION | KEY TEL SYS | EXCLUSION KEY LEADS | | | | | | | |
|-------------|-------------------|---------------------|------|-----|-----|------|------|-----|-----|
| | | Bt-W | W-BL | O-W | W-O | BL-V | V-BL | 0-V | V-0 |
| On any line | 1A | R* | Т* | 1B† | H* | ER | ET | EB | EH |
| | 1A1 or 1A2 | R* | T* | EB | H* | ER | ET | EB | EH |

^{*} Terminal of line involved,

TABLE B
POLARITY GUARD CONNECTIONS

(819040528 OR P-90D052 POLARITY GUARD)

| LEAD | | REMOVE FROM | CONNECT TO | | |
|-------------------|-----|----------------|------------|-------------------|--|
| LEA | | NET. NET. | | POLARITY GUARD | |
| Dial | BK | RR | | T | |
| | G-W | C | | S | |
| Line Switch | W | С | | S | |
| Polarity Guard | G | | RR | | |
| | W | | C | | |

TABLE C

PICKUP-SIGNAL KEY CONVERSION

| KEY OPTIONS | BR-BK KEY LEAD |
|----------------|-------------------|
| HPPPPC | M |
| HPPPSC | SG |

[†]When other than line 1 is excluded on 1A KTS, disconnect, insulate, and store O-W mounting cord conductor from terminal 1B; connect balance lead conductor from line involved to 1B.

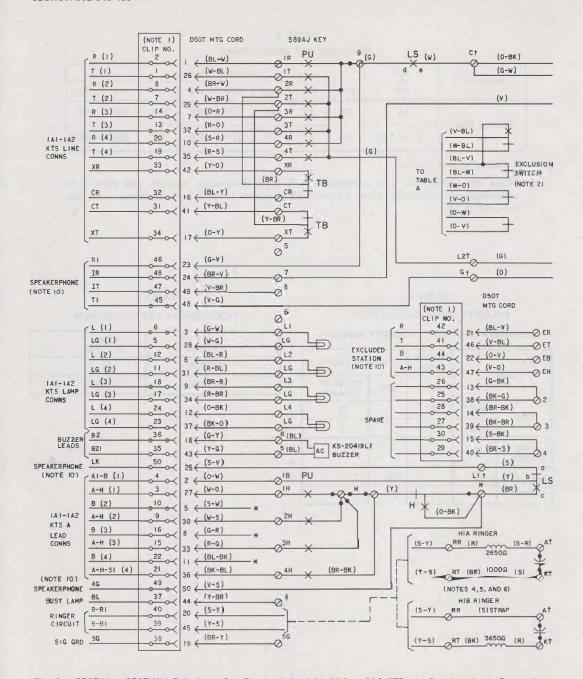


Fig. 1—♦2565LK or 2565LKM Telephone Set, Factory-Wired for 1A1 or 1A2 KTS and Speakerphone Connections (Sheet 1 of 2)♦

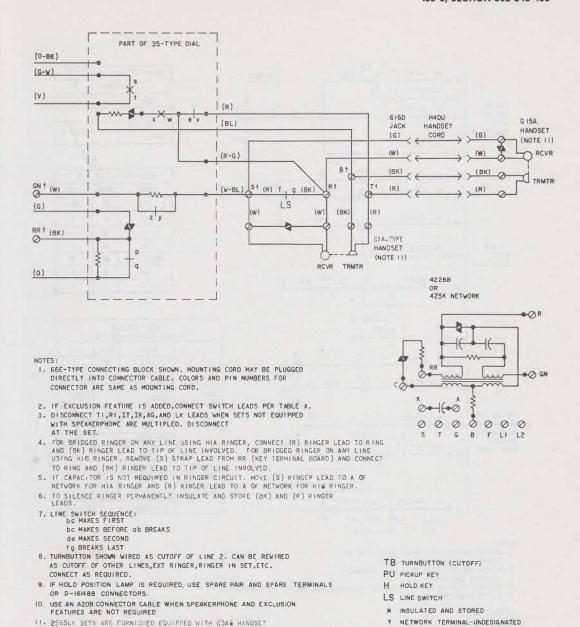



Fig. 1—\$2565LK or 2565LKM Telephone Set, Factory-Wired for 1A1 or 1A2 KTS and Speakerphone Connections (Sheet 2 of 2)4

TERMINALS ARE ON KEY TERMINAL

BOARD

AND CORD. 2565LKM SETS ARE FURNISHED EQUIPPED WITH

GISA HANDSET, HADU HANDSET CORD, AND GIED JACK ASSEMBLY.

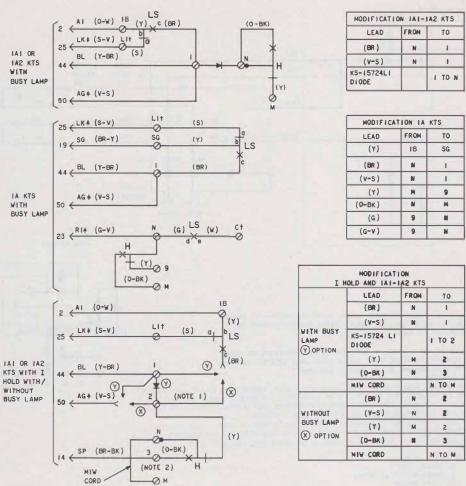

NOTES:


- REMOVE (G-BK) AND (BK-G) LEADS FROM KEY TERMINAL 2, INSULATE AND STORE.
- 2. REMOVE (BK-BR) LEAD FROM KEY TERMINAL 3,
- INSULATE AND STORE. +- NETWORK TERMINALS - UNDESIGNATED TERMINALS ARE ON KEY TERMINAL BOARD

- 3-TYPE SPEAKERPHONE LEAD


H-HOLD KEY

LS-LINE SWITCH

Fig. 2—Optional Features with 3-Type Speakerphone

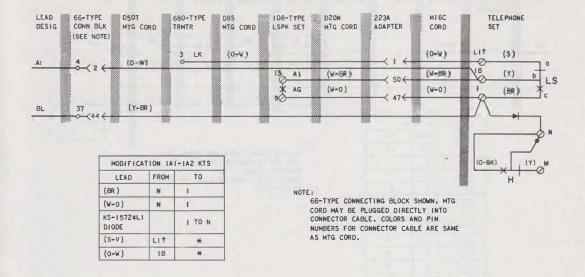


A. IAI-IAZ KTS WIRED FOR BUSY LAMP WITH MIGC CORD TERMINATED IN TEL SET

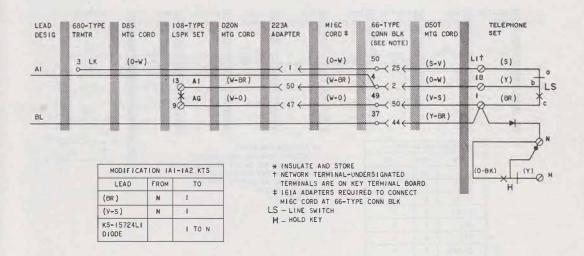


B. IAI-IA2 KTS WIRED FOR BUSY LAMP WITH MIGC CORD TERMINATED AT 66-TYPE CONN BLK

Fig. 3—Optional Features with 4A Speakerphone (Sheet 1 of 3)

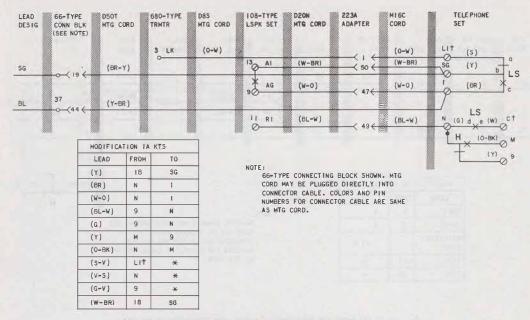


A. IA KTS WIRED FOR BUSY LAMP WITH MISC CORD TERMINATED IN TEL SET

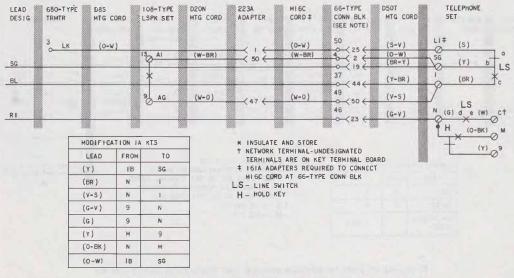


B. A KTS WIRED FOR BUSY LAMP WITH MIGC CORD TERMINATED AT 66-T TPE CONN BLK

Fig. 3—Optional Features with 4A Speakerphone (Sheet 2 of 3)

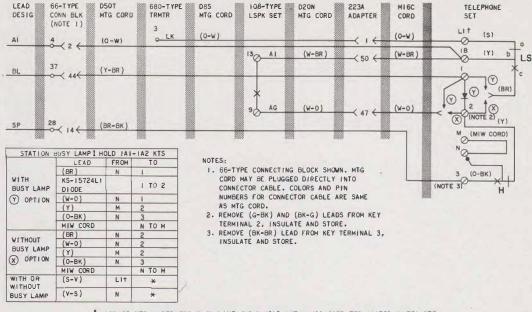

A. IAI-IA2 KTS WIRED FOR BUSY LAMP AND I HOLD WITH MIGC CORD TERMINATED IN TEL SET

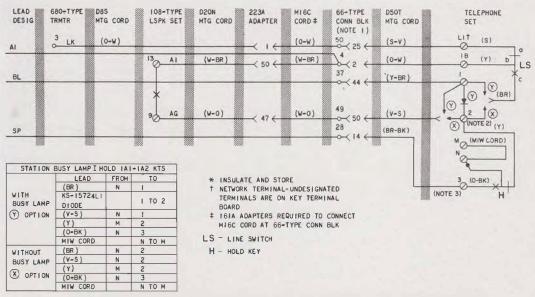

B. IAI-IA2 KTS WIRED FOR BUSY LAMP AND I HOLD WITH MIGC CORD TERMINATED AT 66-TYPE CONN BLK

Fig. 3—Optional Features with 4A Speakerphone (Sheet 3 of 3)