881A100, 881B100, 881C100, 881A101, 881B101, 881C101,
881B110, 881C110, 2881A100, 2881B100, 2881C100, 2881A101, 2881B101,
2881C101, 2881B110, AND 2881C110 TELEPHONE SETS
IDENTIFICATION, INSTALLATION, AND CONNECTIONS

1. GENERAL

1.01 This section contains information for the 881A100 (MD), 881B100 (MD), 881C100, 881A101 (MD), 881B101 (MD), 881C101, 881B110 (MD), 881C110, 2881A100 (MD), 2881B100 (MD), 2881C100, 2881A101 (MD), 2881B101 (MD), 2881C101, 2881B110 (MD), or 2881C110 ▶ESIGN LINE* telephone (*Chestphone***) sets (Fig. 1 and 2).

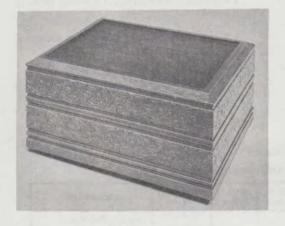


Fig. 1—881C100 or 2881C100 DESIGN LINE Telephone Set With Cover Closed



- Revise Table A to show only C code telephone sets
- *Trademark American Telephone and Telegraph Company.
- ${\bf **Trademark American Telecommunication Corporation}.\\$



Fig. 2-2881C100 DESIGN UNE Telephone Set

- Add information on 1A converter, paragraph 3.01 and connection figures
- Update information in Fig. 9, 13, 14, 15, 16, 17, and 18
- Change figure titles to agree with telephone set codes.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

Printed in U.S.A.

Warning: Telephone apparatus or wiring shall not be installed in a location where minumum separation from other wiring as specified in Section 460-300-149 cannot be maintained.

- 1.03 The 881C100, 881C101, 881C110, 2881C100, 2881C101, and 2881C110 telephone sets are similar to the 881B100, 881B101, 881B110, 2881B100, 2881B101, and 2881B110 sets except that the C codes use a new line switch [identified by two extra (BL and BL-W) leads].
- 1.04 The customer's premises must be properly wired with an appropriate connecting block or jack, in order to accept the D4BU plug-ended mounting cord.

2. IDENTIFICATION

2.01 The 881C100, C101, C110, (rotary dial) and the 2881C100, C101, C110 (TOUCH-TONE® dial) equipped telephone sets are DESIGN LINE telephone sets being made available to the customer. The customer buys the housing and the handset from the telephone company and the telephone company retains ownership of the transmission and signaling components.

A. Ordering Guide (Refer to Table A)

2.02 Basic Telephone Set Ordering Information:

Example: Set, Telephone, 2881C100† is a simulated walnut Chestphone equipped with a TOUCH-TONE dial (Fig. 2).

2.03 These telephone sets are intended to be used as single line or two-party desk sets and not recommended for use on four- and eight-party service.

2.04 Optional Components (order separately):

- 819040122 (P-90D012) Guard Assembly (polarity guard)
- 814316121 (P-43A612) Screw (for mounting polarity guard)

†Refer to Table A for available codes and ordering information.

♦TABLE A♦
AVAILABLE CODES AND ORDERING GUIDE

TEL SET CODE	TELEPHONE UNIT	DIAL	TRMTR UNIT	RCVR UNIT	MTG CORD	HANDSET CORD	DESCRIPTION		
881C100	880GT-60	8HA-120				H4DU-60	Rotary Dial Walnut Chestphone		
2881C100	2880CT-60	35AH3D	T1					11410000	TOUCH-TONE Dial Walnut Chestphone
881C101	880GT-03	8HA-120		U3	D4BU-29	H4DU-03	Rotary Dial Black Leatherette Chestphone		
2881C101	2880CT-03	35AH3D		33			TOUCH-TONE Dial Black Leatherette Chestphone		
881C110	880FT-58	8HA-119				H4DU-58	Rotary Dial Optique Chestphone		
2881C110	2880CT-58	35AH3D					TOUCH-TONE Dial Optique Chestphone		

3. INSTALLATION AND CONNECTIONS

- 3.01 These telephone sets are furnished from the factory fully assembled and wired for bridged ringing. To connect the telephone set, plug the mounting cord into a 625-type connecting block or if the existing jack is a 548A or equivalent, a 1A converter or a 225A adapter is required and must be ordered separately.
- 3.02 The internal connections for these telephone sets, for nonkey system use, are shown in Fig. 13, 14, 17, and 18.
- 3.03 Connections for 1A KTS do not require any telephone set modifications and are wired same as Fig. 13, 14, 17, and 18.
- 3.04 Connections for use with 1A1 or 1A2 KTS are shown in Fig. 15 and 17 for the rotary dial telephone sets and Fig. 16 and 18 for the TOUCH-TONE dial telephone sets. Table D includes necessary wiring modifications required for 1A1 or 1A2 key telephone system use.
- 3.05 To gain access to the interior of these sets for wiring changes, refer to appropriate paragraph in Part 4.
- 3.06 If a polarity guard is to be installed in conjunction with the 35-type TOUCH-TONE dial, install Guard Assembly (Polarity Guard), ordered separately using an 814316121 (P-43A612) screw which is also ordered separately. A polarity guard should be used only when specified by local instructions for end-to-end signaling purposes when battery and ground reversals are encountered. Refer to Fig. 3 for installation information and Table E for connections.

3.07 Line and Ringer Connections:

- (1) For single line and two-party service, refer to Table B for the rotary dial sets and to Table C for the TOLICH-TONE dial sets
- (2) For adjustments and ringer cutoff feature of the P1A ringer, refer to Section 501-259-101.

4. REMOVAL OF TELEPHONE COMPANY-OWNED COMPONENTS

4.01 When it is desired to discontinue telephone service of these DESIGN LINE telephone sets, proceed as follows:



Fig. 3—819040122 (P-90D012) Guard Assembly (Polarity Guard) Installed on Telephone Set

Note: Remove the telephone company-owned components that can be easily removed.

- (1) Remove four bottom cover mounting screws from the bottom of the telephone set and remove the bottom cover (Fig. 4).
- (2) Disconnect base end of handset cord (Fig. 7).
- (3) Pull cord, attached to the handset, out through the top of the telephone set base.
- (4) Remove four telephone set base mounting screws and withdraw the base (Fig. 5).
- (5) Rotary dial equipped set only—remove three dial mounting screws and remove the rotary dial (Fig. 6).
- (6) TOUCH-TONE dial equipped sets only—remove three faceplate mounting screws as shown in Fig. 8 and remove the faceplate. Remove two dial mounting screws and remove the TOUCH-TONE dial (Fig. 9).
- (7) TOUCH-TONE dial equipped sets only—replace faceplate (Fig. 9).
- (8) Open handset by removing two screws (Fig. 10) and remove transmitter and receiver cups. Remove T1 transmitter and U3 receiver units (Fig. 11).

- (9) Disconnect or unplug and remove the cord from the handset (Fig. 12).
- (10) Replace transmitter and receiver cups and restore handset cover.
- **4.02** Follow local procedures for returning telephone company-owned components.
- 4.03 When it is desired to return a set to Western Electric for repair, it should be packed using the D-180600 Kit of Parts which contains packing materials and instructions.

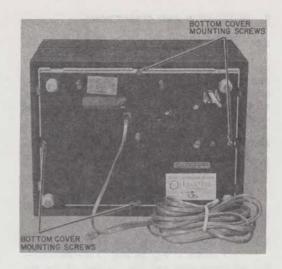


Fig. 4—881C- or 2881C-Type Telephone Set, Bottom View

\$TABLE B&

LINE AND RINGER CONNECTIONS (NOTE) (SETS WITH ROTARY DIAL ONLY)

WIRE OR LEAD	COLOR	INDIVID. OR BRIDGED	RING PARTY	TIP PARTY			
				NO IDENT GROUND	IDENTIFYING GROUND		
					1000Ω	2650Ω	
623P4 Mtg Cord Jack	R G Y BK	A L1 G L2	A L1 G L2	L1 A G L2	F L2 G	F L2 G *	
Ringer	R S-R S BK	K * * L1	K * G	K * * G	K * L1 G	K L1 * G	
Line Switch	Y or BL-W†	A F	A F	A F	L2 B	L2 B	

Note: For access to set wiring follow applicable steps in Part 4.

^{*} Insulated and stored.

^{† (}Y) lead on 881 A and B-type sets, (BL-W) lead on 881 C-type sets.

♦TABLE C♦

LINE AND RINGER CONNECTIONS (NOTE) (SETS WITH TOUCH-TONE DIAL ONLY)

WIRE OR LEAD	COLOR	INDIVID. OR BRIDGED	RING PARTY	TIP PARTY			
				NO IDENT GROUND	IDENTIFYING GROUND		
					1000Ω	2650Ω	
623P4 Mtg Cord Jack	R G Y BK	A L1 G L2	A L1 G L2	L1 A G L2	C L2 G	C L2 G *	
Ringer	R S-R S BK	K * * L1	K * G	K * G	K * L1 G	K L1 * G	
Line Switch	Y or BL-W† W BR	A F C	A F C	A C F	L2 B F	L2 B F	

Note: For access to set wiring follow applicable steps in Part 4.

♦TABLE D♦

MODIFICATION FOR 1A1 OR 1A2 KTS (NOTE)

	188	NETWORK	TERMINAL
LEAD	COLOR	REMOVE FROM	CONNECT
Line Switch	S Y BR G W	A A C or L2* L1 F	L2 L2 G A
623P4 Mtg Cord Jack	G	L1	F
Ringer	ВК	L1	F

Note: For access to telephone set wiring follow applicable steps in Part 4.

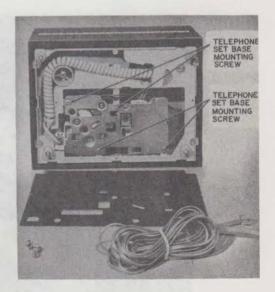


Fig. 5—881C- or 2881C-Type Telephone Set With Bottom Cover Removed

^{*} Insulated and stored.

^{† (}Y) lead on 2881A and B-type sets, (BL-W) lead on 2881C-type sets.

^{*} C on 881A-and B- and 2881A-and B-type sets, L2 on 881C- and 2881C-type sets.

♦TABLE E♦

POLARITY GUARD CONNECTIONS (NOTE)

LEAD	COLOR	DISCONNECT FROM	CONNECT		
LEAD	COLOR	NET.	NET.	POLARITY GUARD	
Dial	ВК	RR		Т	
Line Switch	BR or BL* § W†	C		s	
623P4 Mtg Cord Jack	R‡			3	
Polarity Guard	G W		RR C		

 ${\it Note:}\ \ {\it For access to telephone set wiring follow applicable steps in part 4.}$

- * If wired for bridged service or ring party.
- \dagger If wired for tip party with no identification ground, 1A1, or 1A2 KTS.
- ‡ If wired for tip party with identification ground.
- \S (BR) lead on 2881 A-and B-type sets, (BL) lead on 2881 C-type sets.



Fig. 6—Removing Rotary Dial

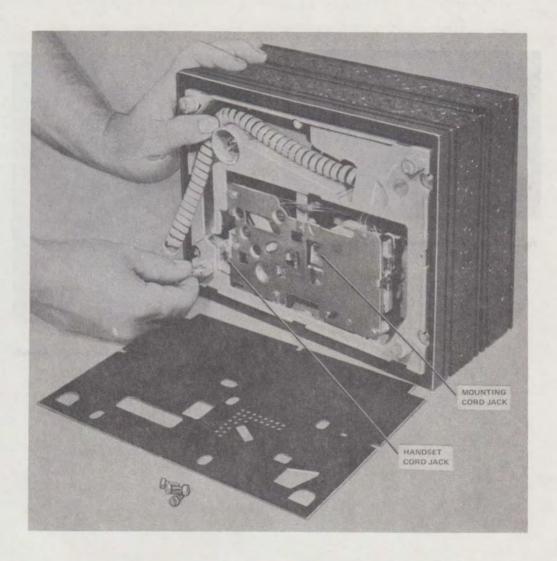


Fig. 7—Location of Handset and Mounting Cord Jacks

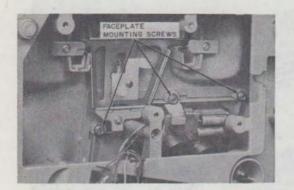


Fig. 8—Removing Faceplate from Set Equipped With TOUCH-TONE Dial

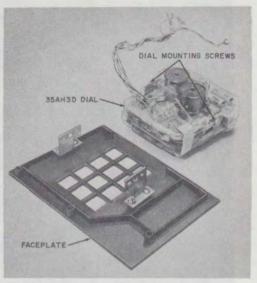


Fig. 9—♦TOUCH-TONE Dial Removed From Faceplate♦

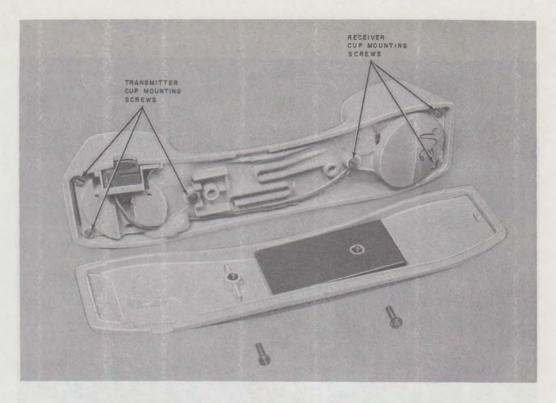


Fig. 10—Removing Transmitter and Receiver Cups From Handset (A Code Sets Only)

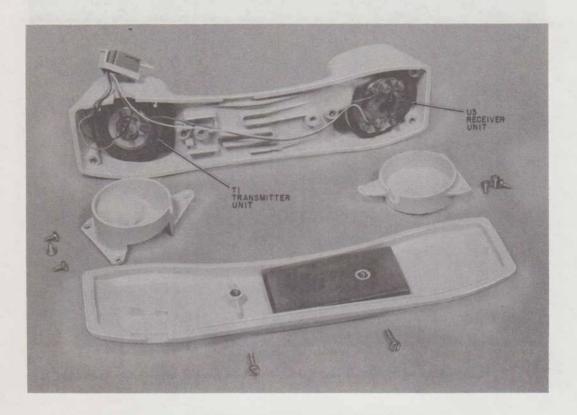


Fig. 11—Removing Transmitter and Receiver Units From Handset (A Code Sets Only)



Fig. 12—881C100 Telephone Set—Removing Handset Cord From Handset

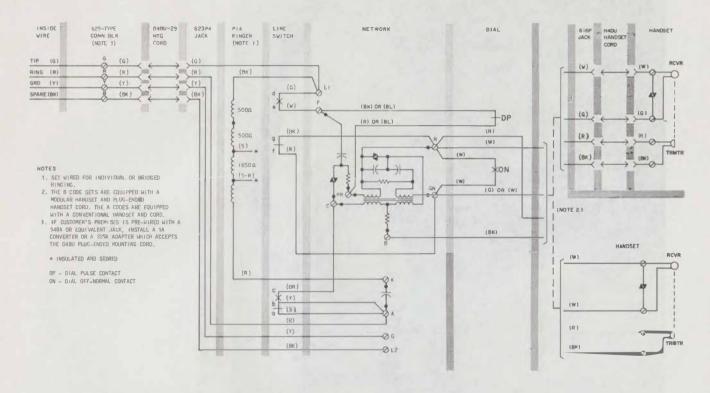


Fig. 13—₱881A100 (MD), 881B100 (MD), 881A101 (MD), 881B101 (MD), or 881B110 (MD) Telephone Set, Connections ●

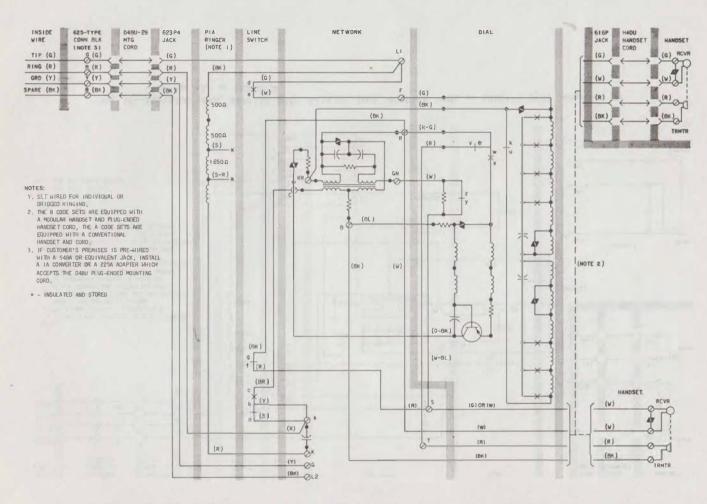


Fig. 14-#2881A100 (MD), 2881A101 (MD), 2881B100 (MD) 2881B101 (MD), or 2881B110 (MD) Telephone Set, Connections

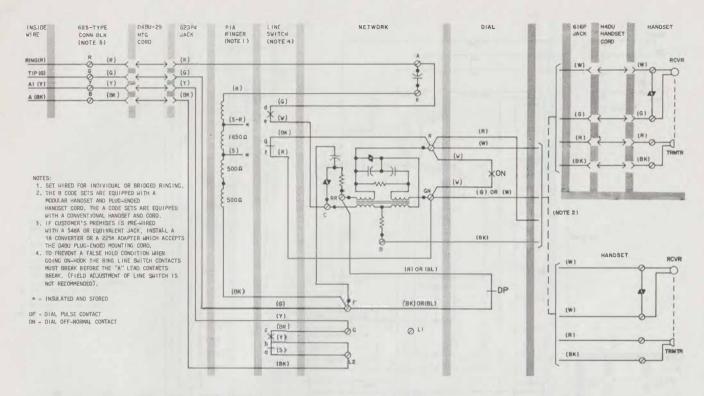


Fig. 15—₱881A100 (MD), 881B100 (MD), 881A101 (MD), 881B101 (MD), or 881B110 (MD) Telephone Set Wired for 1A1 or 1A2 KTS€

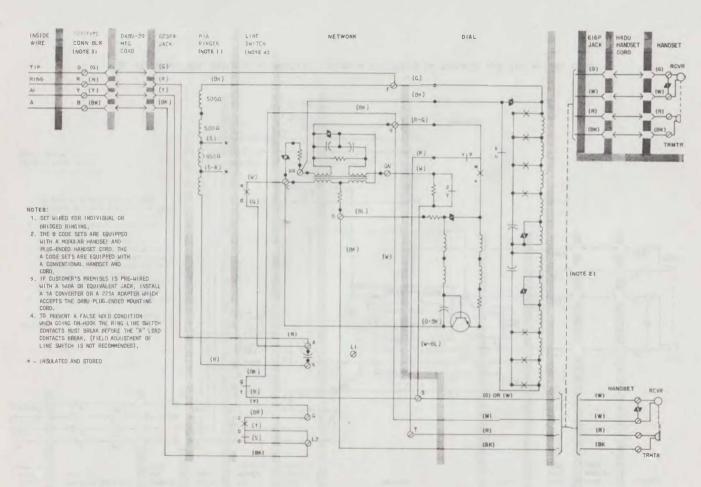


Fig. 16—02881A100 (MD), 2881B100 (MD), 2881A101 (MD), 2881B101 (MD), or 2881B110 (MD) Telephone Set Wires for 1A1 or 1A2 KTS0

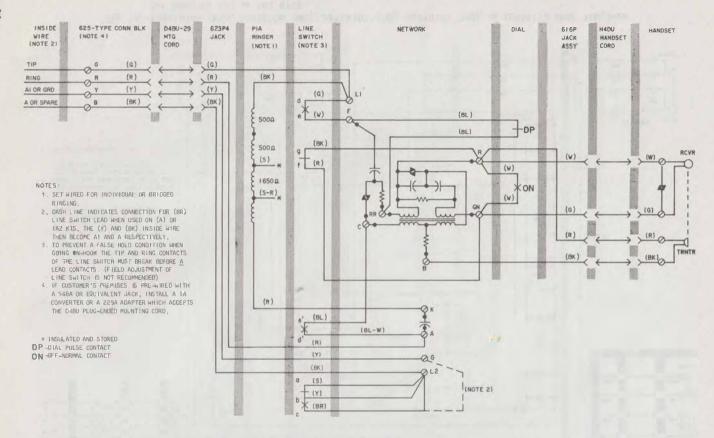


Fig. 17—♥881C100, 881C101, or 881C110 Telephone Set, Wired for Non-KTS and 1A1 or 1A2 KTS€

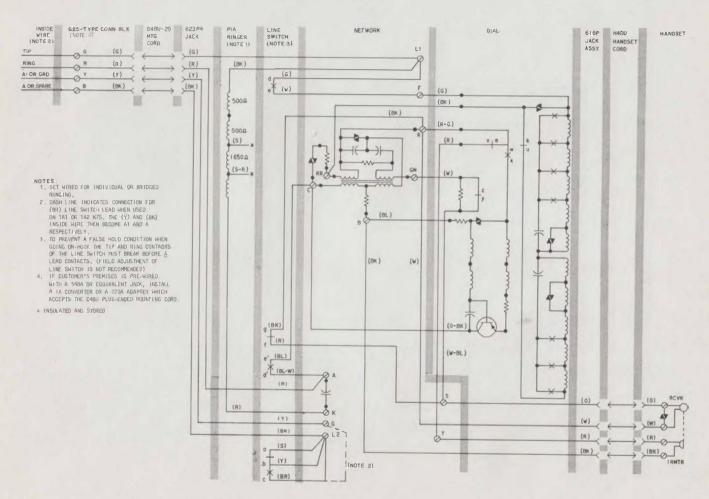


Fig. 18-02881C100, 2881C101, or 2881C110 Telephone Set, Wired for Non-KTS and 1A1 or 1A2 KTS0