

## SPEAKERPHONE SYSTEM—3-TYPE 2500S TELEPHONE SET CONNECTIONS AND MAINTENANCE

### 1. GENERAL

1.01 These sets are supplied factory-wired for use with 3-type speakerphone. Refer to Division 502 for set wiring and ringer connections.

1.02 This section is reissued to:


- Change section reference in 1.01 and 3.01.
- Show 666A transmitter MD, Fig. 1.

### 2. CONNECTION INDEX

Fig. 1—2500S Telephone Set—Speakerphone Connections

### 3. MAINTENANCE

3.01 Refer to the appropriate section in Division 502 for maintenance information for the 2500S telephone set. Refer to Division 512 for maintenance of speakerphone components used with this set.

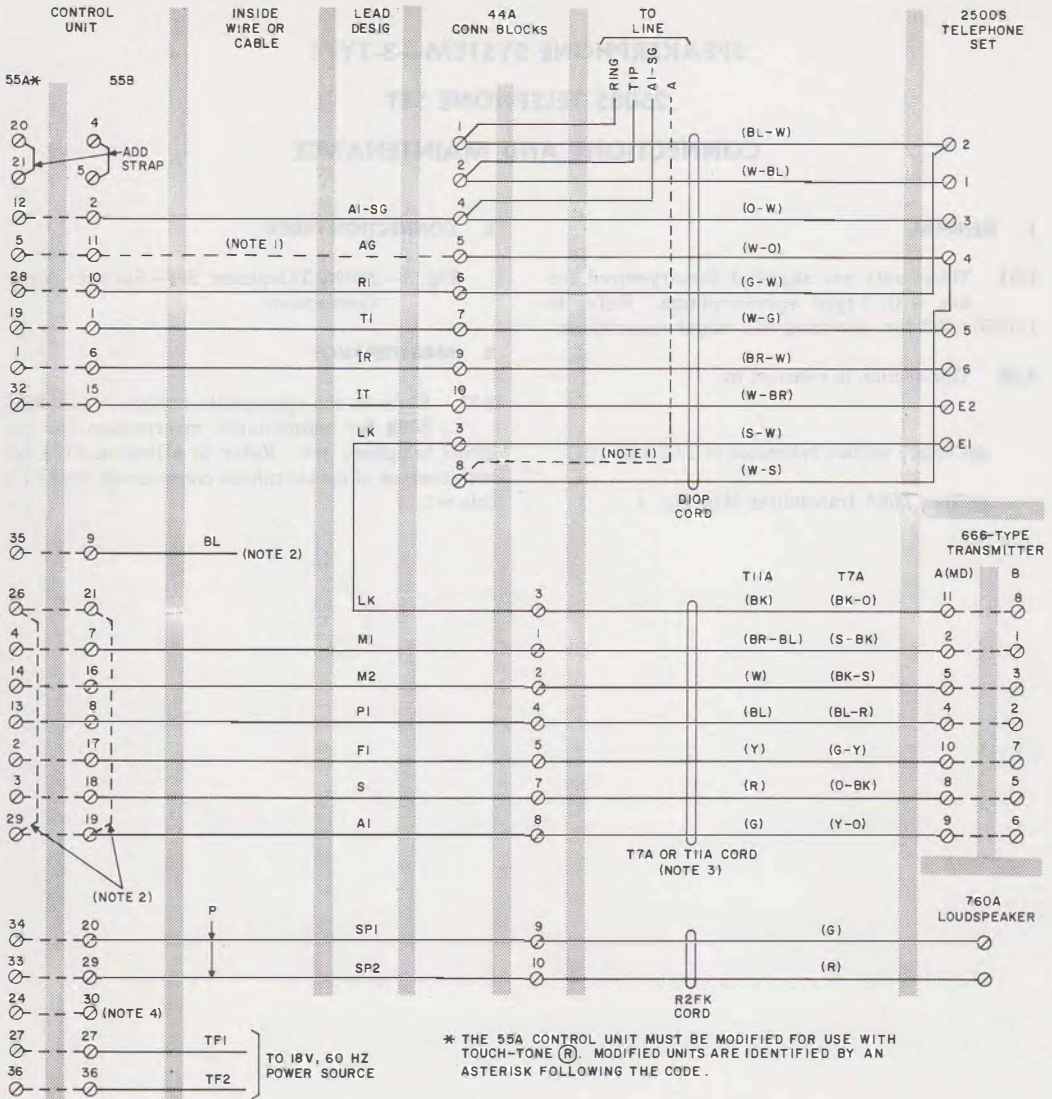

\* THE 55A CONTROL UNIT MUST BE MODIFIED FOR USE WITH TOUCH-TONE (R). MODIFIED UNITS ARE IDENTIFIED BY AN ASTERISK FOLLOWING THE CODE.

- NOTES:
1. WHEN USED WITH IA1 OR IA2 KTS CONNECT A AND AG AS SHOWN.
  2. CONNECT BL LEAD FOR BUSY LAMP CONTROL BY 55-TYPE CONTROL UNIT. ADD STRAP AS SHOWN.
  3. INSULATE AND STORE UNUSED LEADS OF T11A CORD.
  4. IF REDUCED LOUDSPEAKER VOLUME IS DESIRED, CONNECT SP2 LEAD TO TERMINAL 30 (55B C.U.) OR TERMINAL 24 (55A C.U.).

◆ Fig. 1—2500S Telephone Set—Speakerphone Connections ◆