

SERVICE

2515B AND 2515BM TELEPHONE SETS

1. GENERAL

1.01 Reissued to:

- Add D6AL or D6AP mounting cord and 623D6 jack, Fig. 2
- Show 2515B telephone set MD, Fig. 1.

TABLE A
POLARITY GUARD CONNECTIONS
[819040528 (P-90D052) GUARD ASSEMBLY]

| LEAD | COLOR | REMOVE FROM | | CONNECT TO | |
|----------------|-------|-------------|------|----------------|--|
| | | NET. | NET. | POLARITY GUARD | |
| Dial | BK | RR | | T | |
| Line Switch | BR | C | | S | |
| Polarity Guard | G | | RR | | |
| | W | | C | | |

Note: For use when specified by local instructions for end-to-end signaling installation.

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement


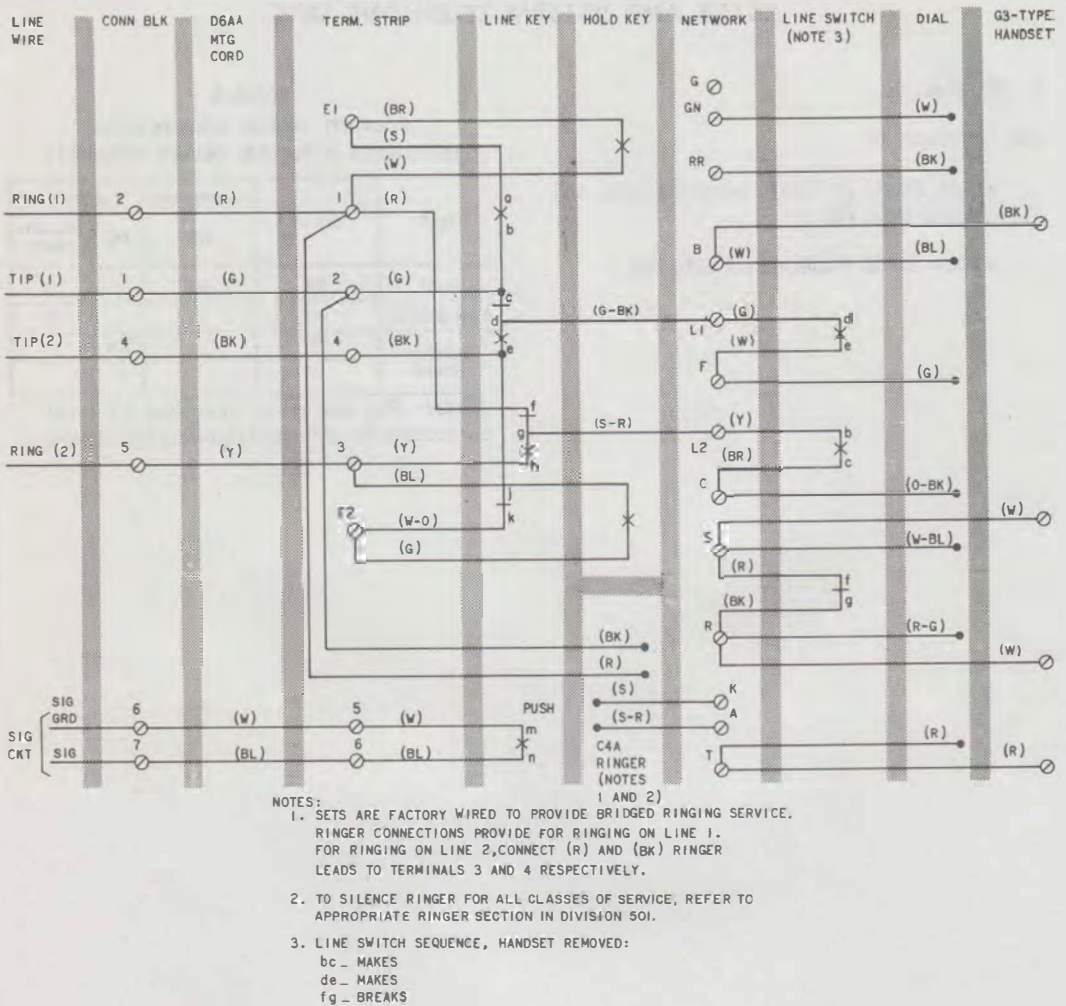


Fig. 1—2515B (MD) Telephone Set Connections, 2-Line Pickup, Hold, and Signaling (Factory Wired)

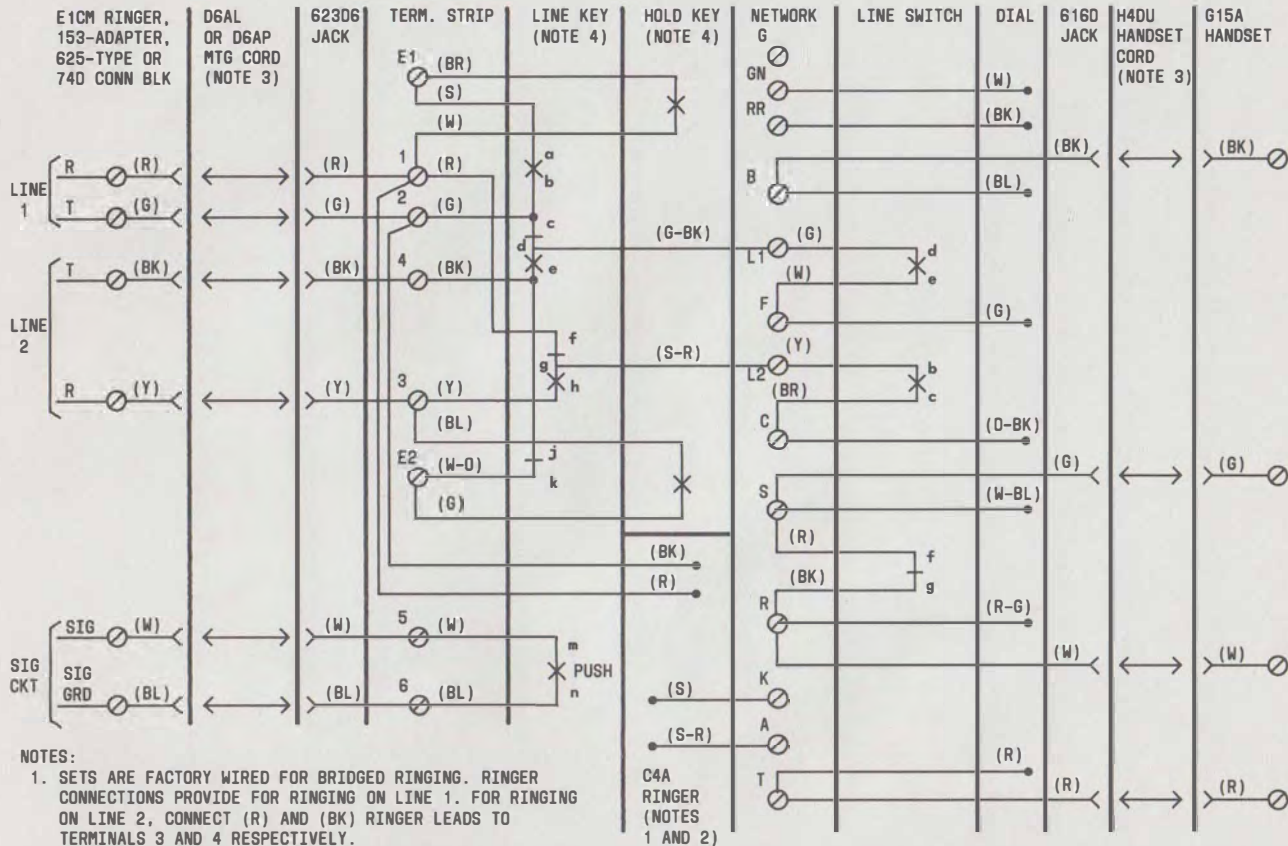

NOTES:

1. SETS ARE FACTORY WIRED FOR BRIDGED RINGING. RINGER CONNECTIONS PROVIDE FOR RINGING ON LINE 1. FOR RINGING ON LINE 2, CONNECT (R) AND (BK) RINGER LEADS TO TERMINALS 3 AND 4 RESPECTIVELY.
2. TO SILENCE RINGER FOR ALL CLASSES OF SERVICE REFER TO APPROPRIATE RINGER SECTION IN DIVISION 5D1.
3. MUST BE ORDERED SEPARATELY.

4. SUBSCRIBER INSTRUCTION BOOKLET SIB-243D SHIPPED LOOSE WITH SET SHOULD BE EXPLAINED AND LEFT WITH CUSTOMER FOR PROPER OPERATION OF LINE AND HOLD KEY.

Fig. 2—2515BM Telephone Set Connections, 2-Line Pickup, Hold, and Signaling (Factory Wired)