

SERVICE

2514B AND 2514BM TELEPHONE SETS

CONNECTIONS

1. GENERAL

1.01 This section contains information on the 2514B (MD) and 2514BM telephone sets (Fig. 1 and 2).

1.02 Reissued to:

- Revise mounting cord jack code, Fig. 2
- Show spare terminals, Fig. 1 and 2.

1.03 When polarity guard is required in these sets, connect guard assembly as shown in Table A.

TABLE A

POLARITY GUARD CONNECTIONS
{819040528 (P-90D052) GUARD ASSEMBLY}

WIRE OR LEAD	COLOR	REMOVE FROM	CONNECT TO	
		NET.	NET.	POLARITY GUARD
Dial	BK	RR		T
Line Switch	W	C		S
Headset and Flash Key	S-R	C		S
Polarity Guard	G		RR	
	W		C	

Note: For use when specified by local instructions for end-to-end signaling installations.

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement


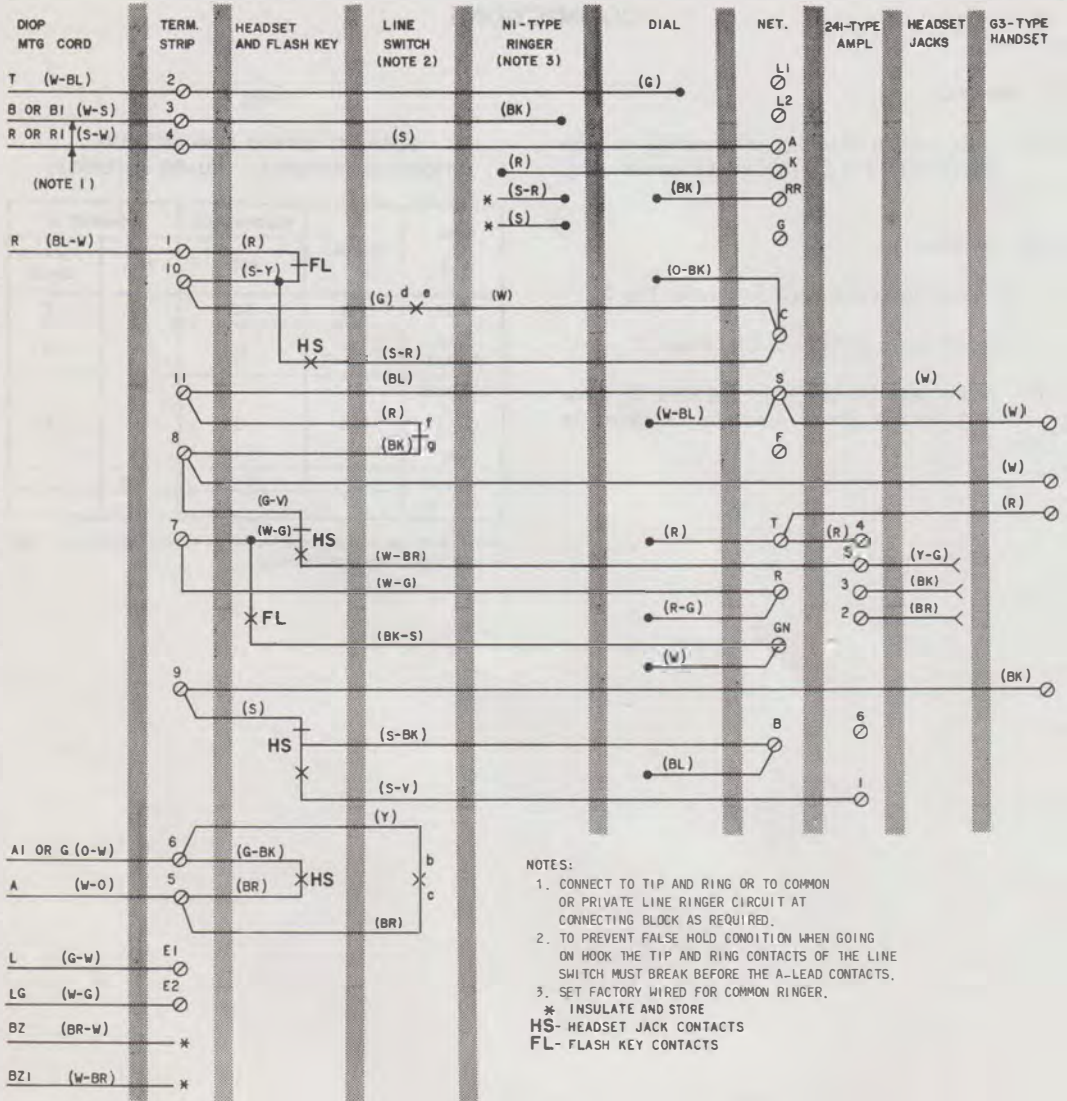


Fig. 1—2514B (MD) Telephone Set, Connections

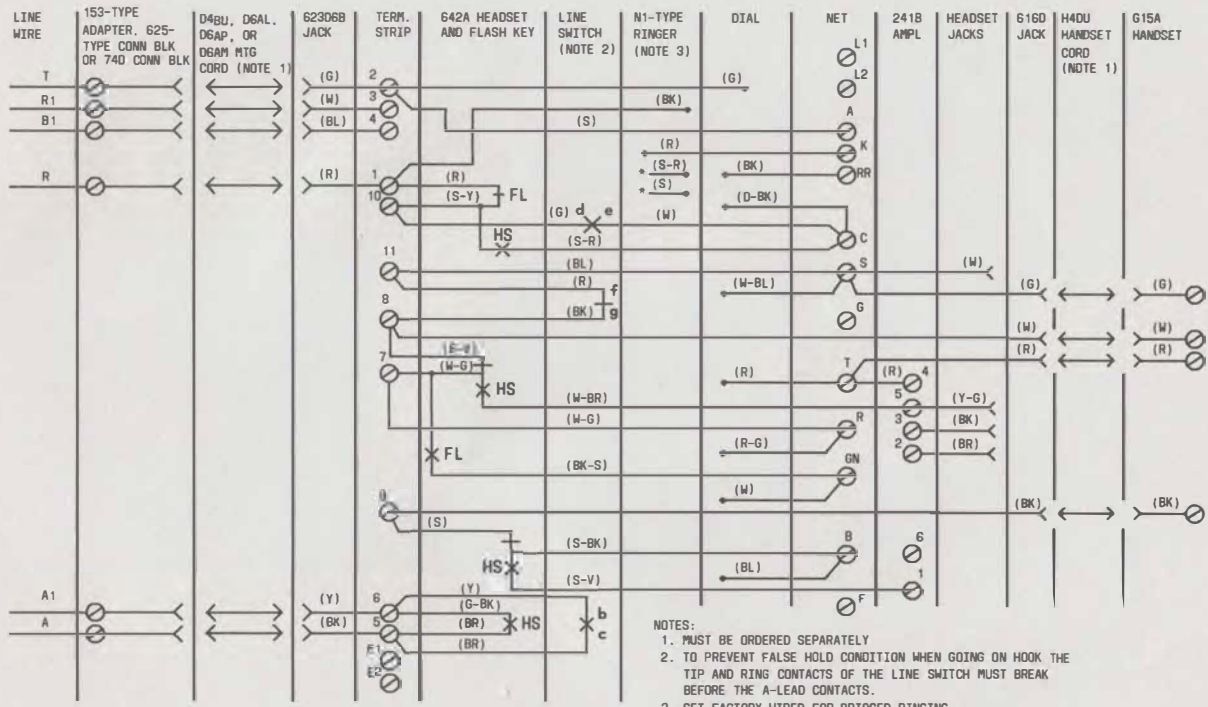

- NOTES:
1. MUST BE ORDERED SEPARATELY
 2. TO PREVENT FALSE HOLD CONDITION WHEN GOING ON HOOK THE TIP AND RING CONTACTS OF THE LINE SWITCH MUST BREAK BEFORE THE A-LEAD CONTACTS.
 3. SET FACTORY WIRED FOR BRIDGED RINGING

* INSULATE AND STORE
 HS - HEADSET JACK CONTACTS
 FL - FLASH KEY CONTACTS

Fig. 2—2514BM Telephone Set, Connections