

REFERENCE

1634-, 1635-, 1636-, 1637-, 1638-, AND 1639-TYPE TELEPHONE SETS

1. GENERAL

1.01 This section contains identification information on 1634-, 1635-, 1636-, 1637-, 1638-, and 1639-type CALL DIRECTOR® telephone sets (Fig. 1). This information was formerly contained in Sections 502-634-111 and 502-636-111 which are hereby canceled.

2. IDENTIFICATION

2.01 1634- and 1635-Type Telephone Sets:

- 18-button (1634-type)
- 30-button (1635-type)
- Concentrator type sets, 1634-type requires a 235-type KTU; 1635-type requires a 236-type KTU
- Can be used with 1A1, 1A2, or 6A KTU and 3-type speakerphone
- 1634- and 1635-type telephone sets are rated MD

2.02 1636-, 1637-, 1638-, and 1639-Type Telephone Sets:

- 18-button (1636-type is a general purpose; 1638-type is a concentrator set)
- 30-button (1637-type is a general purpose; 1639-type is a concentrator set)

● Equipped with jacks for 52- or 53-type headsets

● Concentrator sets require 235- or 236-type KTU

● 1636-, 1637-, 1638-, and 1639-type telephone sets are rated MD

2.03 The faceplate assemblies listed in Table A consist of faceplate and three mats, one of each in gold (-78), silver (-79), and the coordinated color. The color suffix is found of Table B.

2.04 Refer to the section entitled Telephone Sets 630, 1630, and 2630 Series—General Purpose—Selection and Use in Division 502 for information on the keys supplied in these sets.

2.05 The 667B transmitter may be modified with the D-180196 Kit of Parts at the distributing house to reduce mechanical vibration. Order as "Transmitter, 667B, Modified per D-180196."

2.06 Ringer volume control is in two steps. A third step to silence the ringer is blocked by a stop screw which can be removed by the installer.

2.07 Blocking rings are provided with each set to block unused buttons.

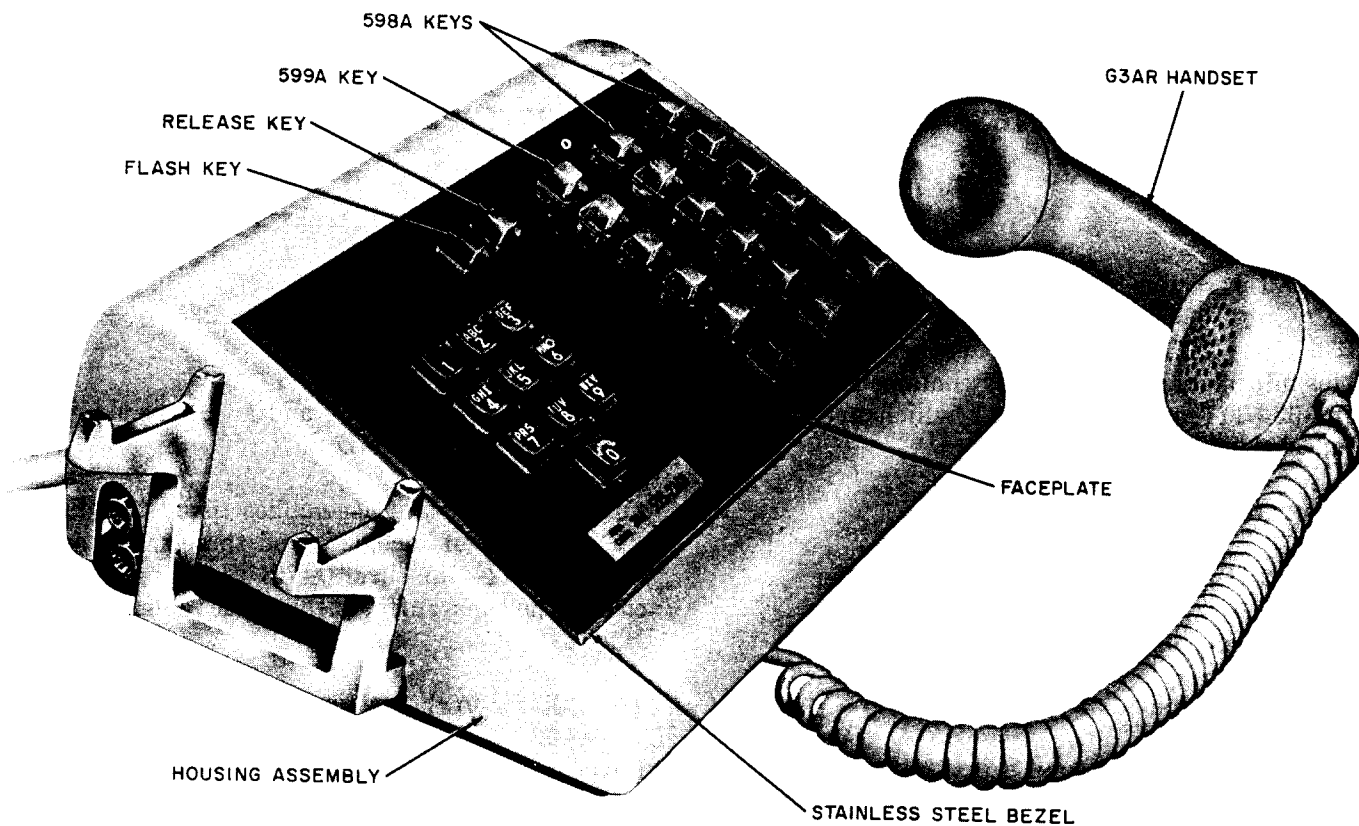


Fig. 1—Typical CALL DIRECTOR Telephone Set

TABLE A
FACEPLATES, AND MATS

TEL SET	SET CODE	FACEPLATE ASSEMBLY*	FACEPLATE ONLY	MATS*
1634D	1, 2, 6, 7, 9, 10	120A1-	P-20F630	P-85F0-
	4	120B1-	P-20F631	
	11, 13	120C1-	P-20F632	P-85F2-
	12	120D1-	P-20F633	
1635D	1, 2, 3, 10, 11, 12	121A1-	P-20F641	P-87F0-
	4	121B1-	P-20F645	
	16, 17	121C1-	P-20F644	P-87F2-
	18	121D1-	P-20F642	
1636C	1, 2, 6, 7, 9, 10	120E1-	P-20F634	P-85F1-
	4	120F1-	P-20F635	
	14, 15	120H1-	P-20F637	
1637D	1, 2, 3, 10, 11, 12, 13, 14, 15	121G1-	P-20F650	P-87F1-
	4	121H1-	P-20F646	
	5	121J1-	P-20F648	
	9, 19	121K1-	P-20F643	
1638C	1, 2, 6, 7, 9, 10	120E1-	P-20F634	P-85F1-
	4	120F1-	P-20F635	
1639D	1, 2, 3, 10, 11, 12	121G1-	P-20F650	P-87F1-
	4	121H1-	P-20F646	

* Color suffix must be added. Refer to Table B.

**TABLE B
COLOR GUIDE***

HOUSING, HANDSET, MTG. CORD COLOR	COLOR SUFFIX	FACEPLATE ASSY AND COORDINATED MAT COLOR	COLOR SUFFIX
Black	(-03)	Charcoal	(-70)
Green	(-51)	Light Green	(-71)
Yellow	(-56)	Light Yellow	(-72)
White	(-58)	Light Gray	(-73)
Pink	(-59)	Muted Pink	(-74)
Light Beige	(-60)	Muted Beige	(-75)
Light Gray	(-61)	Charcoal	(-70)
Aqua Blue	(-62)	Muted Blue	(-76)
Turquoise	(-64)	Muted Turquoise	(-77)

* See Division 500 for promoted colors.

**TABLE C
BEZEL ASSEMBLY AND HOUSING ASSEMBLY**

TEL SET	BEZEL ASSY	HOUSING ASSY*
1634D	P-44E508	P-84C0-
1635D	P-26E212	P-84C1-
1636C	P-44E508	P-81J8-
1637D	P-26E212	P-81J9-
1638C	P-44E508	P-81J8-
1639D	P-26E212	P-81J9-

* Color suffix must be added. Refer to Table B.

Note: Components of P-44E508 Bezel Assembly:

- P-44E505 Upper Bezel
- P-44E506 Lower Bezel
- P-44E507 Bezel Retainer
- RM-712661 Bezel Clip
- RM-712662 Bezel Spring

**TABLE D
REPLACEABLE COMPONENTS**

TEL SET	MTG CORD*	DIAL	RINGER	HANDSET*
1634D	D50L	25Y3 or 25B3	N1A or T1A	G3AR
1635D	D80B			
1636C	D120C			
1637D	D200F			
1638C	D50L			
1639D	D80B			

*Color suffix must be added. Refer to Table B.