

## SPEAKERPHONE SYSTEMS—3-TYPE

### 565-TYPE TELEPHONE SETS

### CONNECTIONS AND MAINTENANCE

#### 1. GENERAL

**1.01** This section shows connections between components of the 3-type speakerphone system and the 565GK, 565HK, and 565LK telephone sets.

**1.02** This section is reissued to:

- Change section reference in 1.03 and 3.01.
- Add information on 55A\* modified control unit, Fig. 1 and 2

**1.03** The connections in this section are for use with 1A1 or 1A2 KTS. For conversion to 1A KTS or for complete telephone set connections refer to the appropriate section in Division 502.

**1.04** These sets may be used with the 55B, 55A (MD), or 55A\* modified control unit. Modified

55A control units are identified by an asterisk following the code.

**1.05** When using a 666-type transmitter unit equipped with a T11A cord, insulate and store the spare conductors.

#### 2. CONNECTIONS

Fig. 1—Connections For 565-Type Telephone Set Using 66E-Type Connecting Block

Fig. 2—Connections For 565-Type Telephone Set Using 149-Type Adapter

#### 3. MAINTENANCE

**3.01** Refer to the appropriate section in Division 502 for maintenance information for the 565-type telephone set. Refer to Division 512 for maintenance of speakerphone components used with these sets.





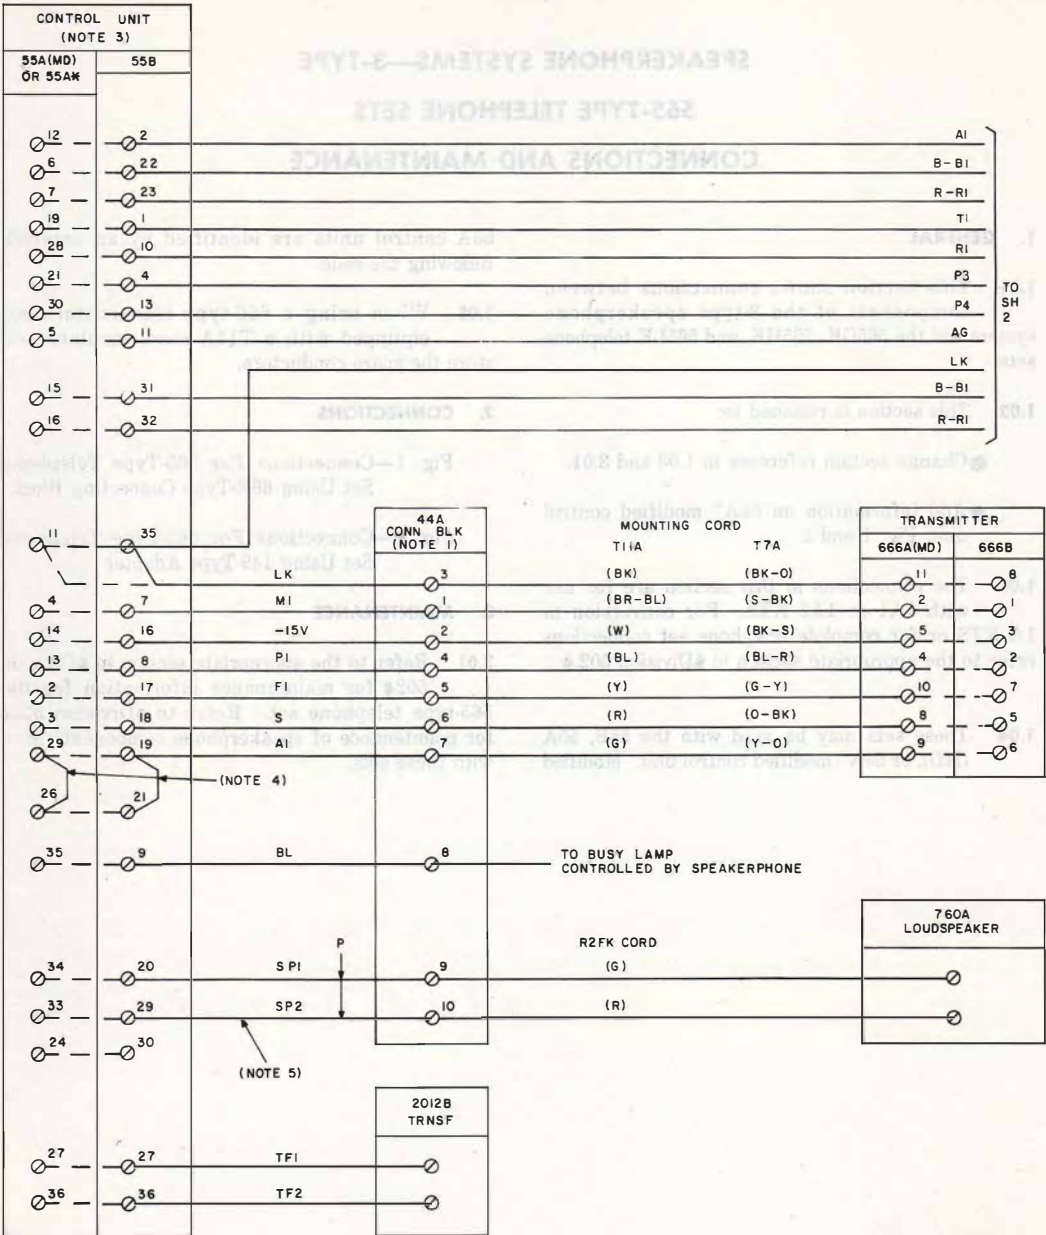


Fig. 1—Connections for 565-Type Telephone Set Using 66E-Type Connecting Block (Sheet 1 of 2)

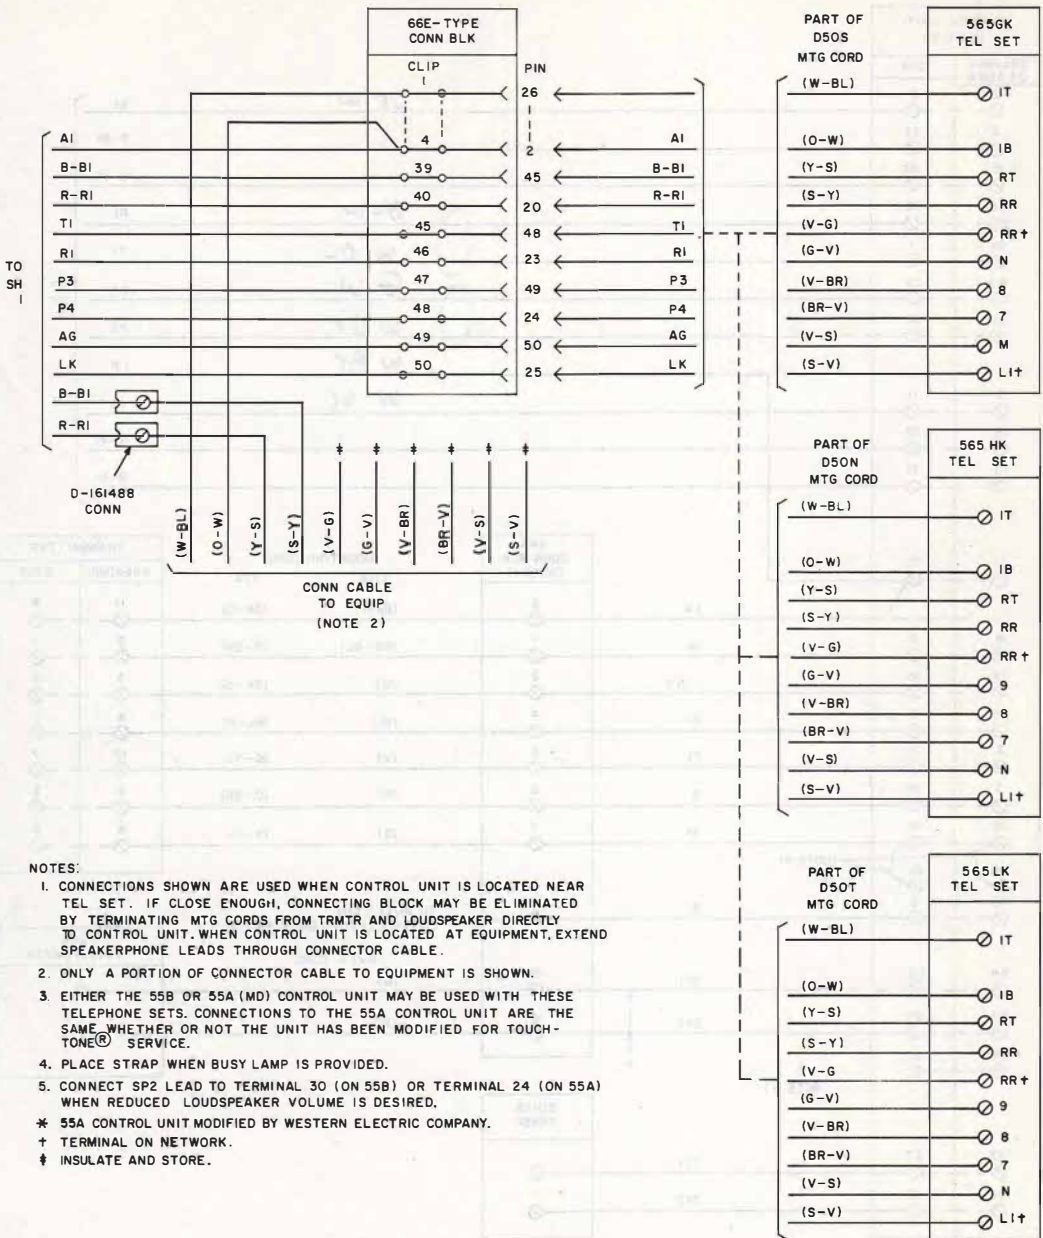


- NOTES:
1. CONNECTIONS SHOWN ARE USED WHEN CONTROL UNIT IS LOCATED NEAR TEL SET. IF CLOSE ENOUGH, CONNECTING BLOCK MAY BE ELIMINATED BY TERMINATING MTG CORDS FROM TRMTR AND LOUDSPEAKER DIRECTLY TO CONTROL UNIT. WHEN CONTROL UNIT IS LOCATED AT EQUIPMENT, EXTEND SPEAKERPHONE LEADS THROUGH CONNECTOR CABLE.
  2. ONLY A PORTION OF CONNECTOR CABLE TO EQUIPMENT IS SHOWN.
  3. EITHER THE 55B OR 55A (MD) CONTROL UNIT MAY BE USED WITH THESE TELEPHONE SETS. CONNECTIONS TO THE 55A CONTROL UNIT ARE THE SAME WHETHER OR NOT THE UNIT HAS BEEN MODIFIED FOR TOUCH-TONE® SERVICE.
  4. PLACE STRAP WHEN BUSY LAMP IS PROVIDED.
  5. CONNECT SP2 LEAD TO TERMINAL 30 (ON 55B) OR TERMINAL 24 (ON 55A) WHEN REDUCED LOUDSPEAKER VOLUME IS DESIRED.
- \* 55A CONTROL UNIT MODIFIED BY WESTERN ELECTRIC COMPANY.  
 † TERMINAL ON NETWORK.  
 ‡ INSULATE AND STORE.

Fig. 1—Connections for 565-Type Telephone Set Using 66E-Type Connecting block (Sheet 2 of 2)

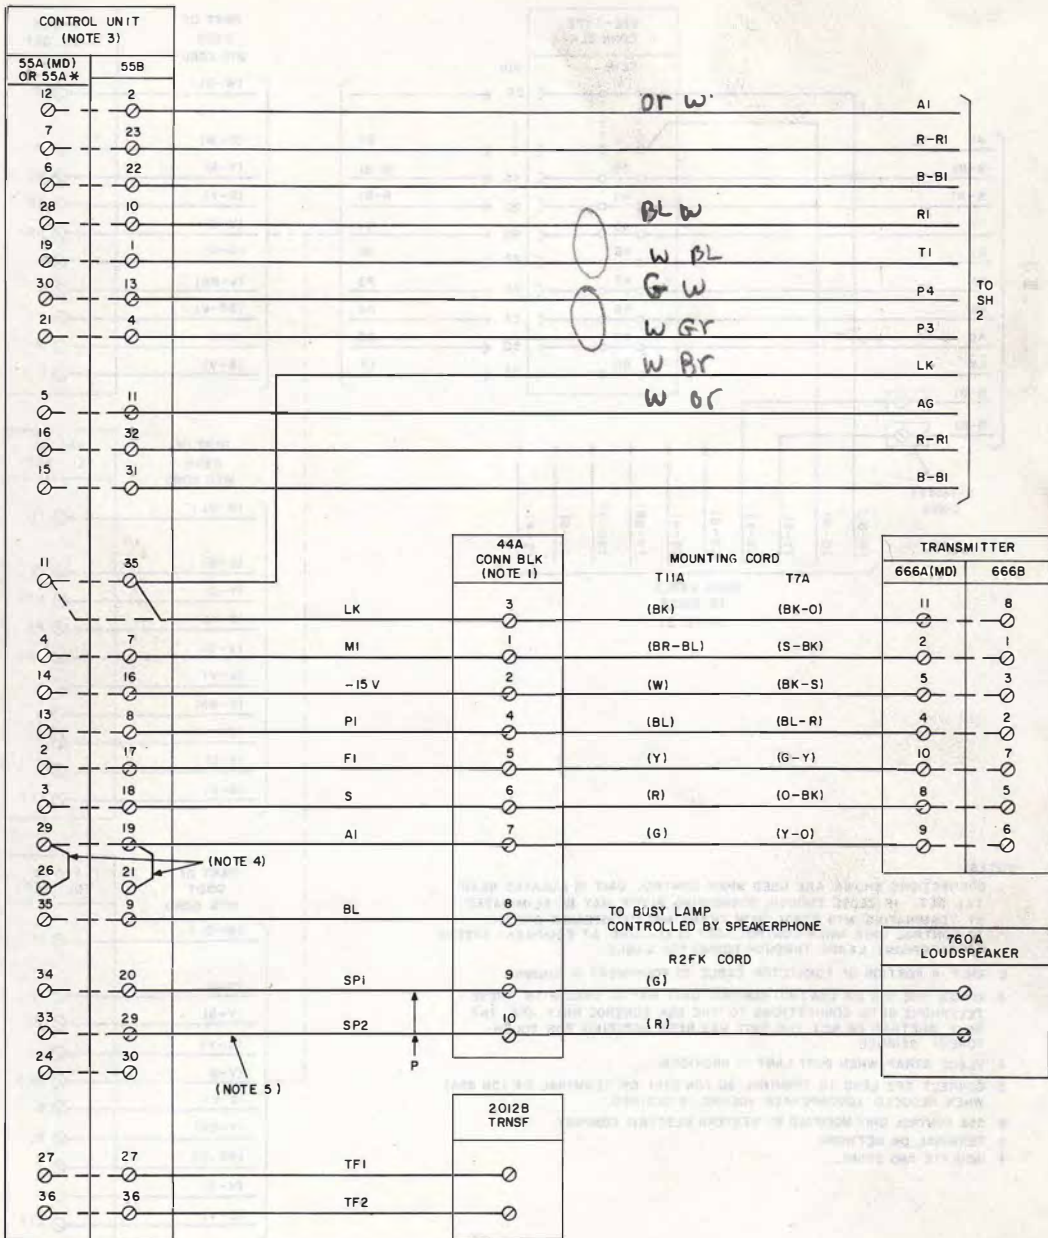

◆ Fig. 2—Connections for 565-Type Telephone Set Using 149-Type Adapter (Sheet 1 of 2)◆

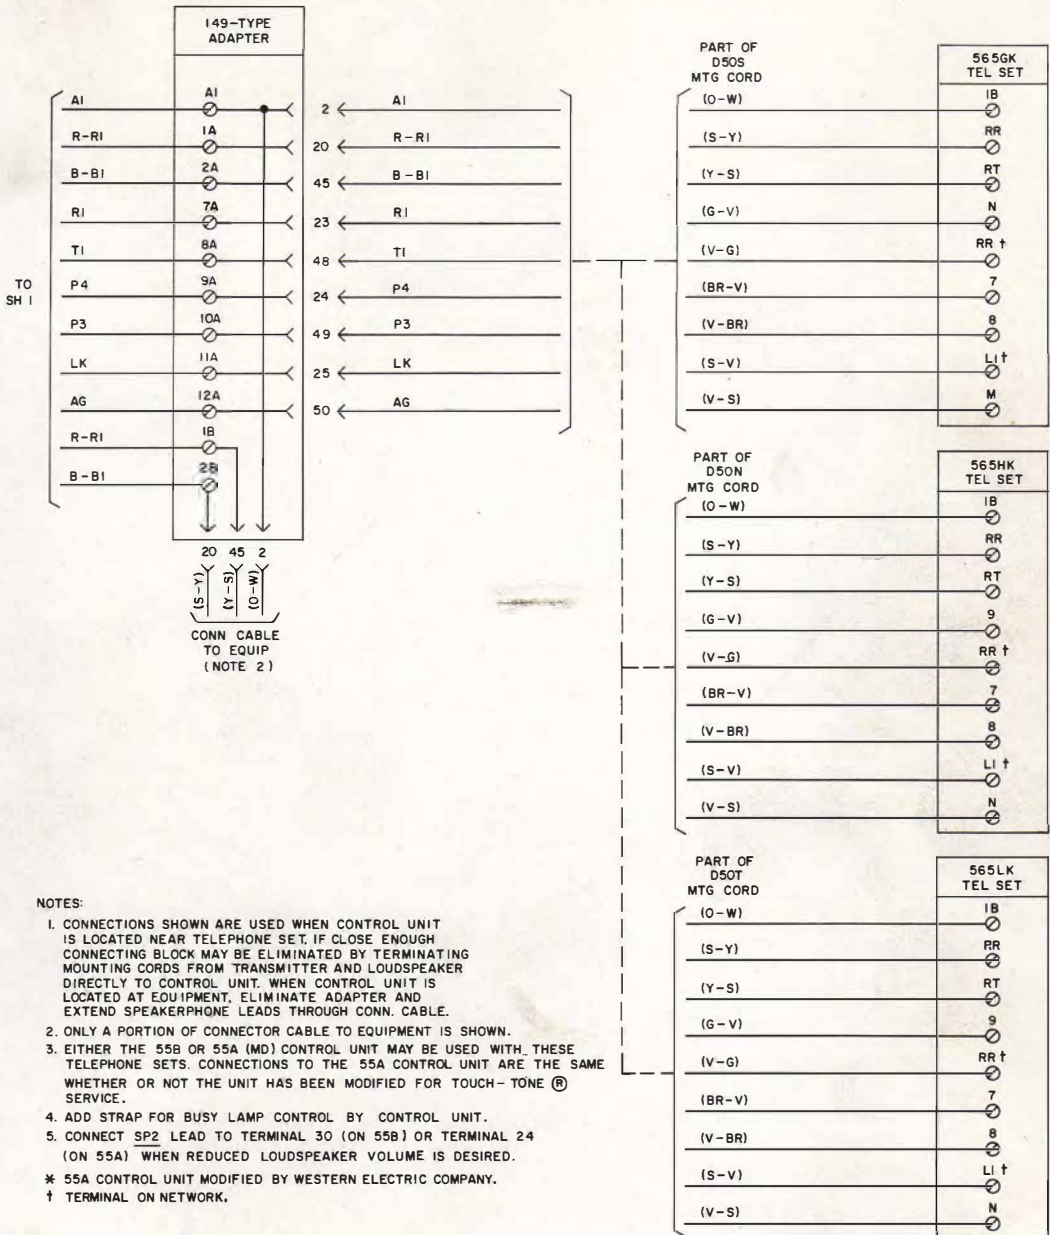

**NOTES:**

1. CONNECTIONS SHOWN ARE USED WHEN CONTROL UNIT IS LOCATED NEAR TELEPHONE SET. IF CLOSE ENOUGH CONNECTING BLOCK MAY BE ELIMINATED BY TERMINATING MOUNTING CORDS FROM TRANSMITTER AND LOUDSPEAKER DIRECTLY TO CONTROL UNIT. WHEN CONTROL UNIT IS LOCATED AT EQUIPMENT, ELIMINATE ADAPTER AND EXTEND SPEAKERPHONE LEADS THROUGH CONN. CABLE.
  2. ONLY A PORTION OF CONNECTOR CABLE TO EQUIPMENT IS SHOWN.
  3. EITHER THE 55B OR 55A (MD) CONTROL UNIT MAY BE USED WITH THESE TELEPHONE SETS. CONNECTIONS TO THE 55A CONTROL UNIT ARE THE SAME WHETHER OR NOT THE UNIT HAS BEEN MODIFIED FOR TOUCH-TONE ® SERVICE.
  4. ADD STRAP FOR BUSY LAMP CONTROL BY CONTROL UNIT.
  5. CONNECT SP2 LEAD TO TERMINAL 30 (ON 55B) OR TERMINAL 24 (ON 55A) WHEN REDUCED LOUDSPEAKER VOLUME IS DESIRED.
- \* 55A CONTROL UNIT MODIFIED BY WESTERN ELECTRIC COMPANY.  
† TERMINAL ON NETWORK.

**Fig. 2—Connections for 565-Type Telephone Set Using 149-Type Adapter (Sheet 2 of 2)**